

Congratulations

Your new X99 chair has just arrived! Your chair features a contemporary European design with features that achieve the ergonomic standards of today. Your X99 chair offers the greatest flexibility in design with soft mesh and full upholstery options. Please take a minute to familiarize yourself with the features of your new X99 chair.



Standard Features



X99 EXECUTIVE / TASK

The X99 features a 3-point tilt mechanism that supports the movements of the back, hip/thigh region and legs as a single unit. In addition, your X99 chair is engineered with a free-floating forward tilt that adjusts according to your weight. You don't even have to activate the adjustment, it moves with you to increase your seated comfort.



Pneumatic Seat-Height Adjustment


EXECUTIVE / TASK (right lever)
Increase the seat height by pulling up the seat-height adjustment lever as you lift out of your seat. To lower the seat height, pull up the lever while remaining seated.

Back Stop EXECUTIVE / TASK

(left lever)
To engage the back stop pull up the lever. To release the back stop push down the lever. The back stop engages in the upright position.

Tuck-Away Tilt Tension EXECUTIVE / TASK


The tuck-away tilt tension feature is located along the right side of your chair. Simply, pull the lever out and turn clockwise to increase the resistance of the recline. Turn the lever counterclockwise to decrease the resistance. When you are finished, simply tuck away the tilt tension into the chair frame.

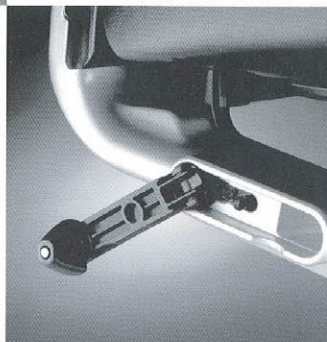

Height-and-Depth Adjustable Lumbar

Soft Mesh Back Version EXECUTIVE / TASK

The lumbar support can be pulled up or pushed down to achieve individual comfort. The depth of the lumbar ("in/out" movement of pad) is adjusted by turning clockwise for added support. To decrease lumbar depth, simply turn counterclockwise.

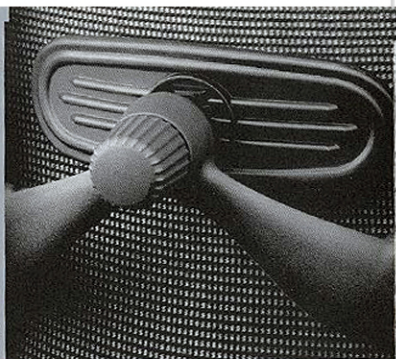


Upholstered Back Version EXECUTIVE / TASK

To adjust the lumbar support location, move the grips on the chair with both hands upward or downward until the desired comfort level is reached. The depth is adjusted by pumping the lower right lever for added support. To decrease the lumbar contour support, simply push the lower right lever down to release.

3-dimensional Arms

EXECUTIVE / TASK

The height-activation button is located under the mid-section of the arm cap. In addition to the height adjustment, the arm caps pivot in and out and slide backward and forward. Adjust the arm caps by moving the arm cap in the appropriate direction.

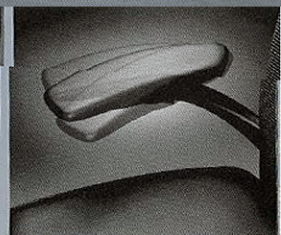

Fixed Loop Arms

EXECUTIVE / TASK

Fixed loop arms are used for applications such as conference rooms.



3-Position Seat-Depth Adjustment

EXECUTIVE / TASK

The seat-depth adjustment is adjusted in three positions to support different size individuals. Pull the seat-depth adjustment out by gripping the side bars. Then turn the adjustment toward you with one hand, while the other hand holds the position of the side bar until the desired position is reached. The seat depth will click when in place.



Options